Fisher-Price®

L1343



Please keep this instruction sheet for future reference,
as it contains important information.
Requires two "AA" batteries (included).
Adult assembly is required.
Tool required for assembly: Phillips screwdriver (not included).

www.fisher-price.com

Assembled Parts

⚠ CAUTION


This product contains small parts in its unassembled state. Adult assembly is required. Take extra care during unpacking and assembly.



#6 x 3/4" (1,9 cm) Screw - 12

Shown Actual Size


Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

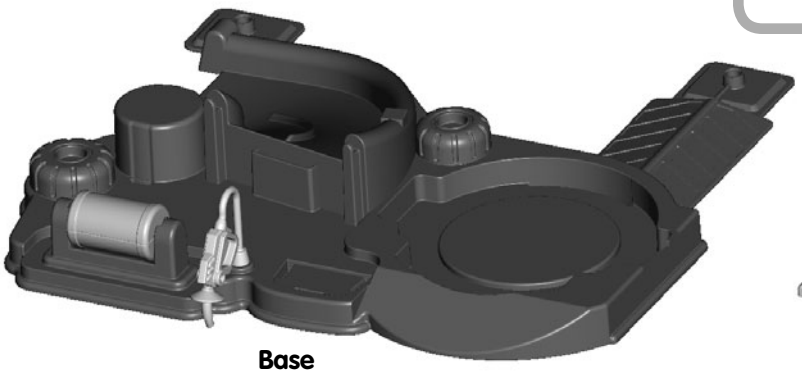

Base




Top Floor

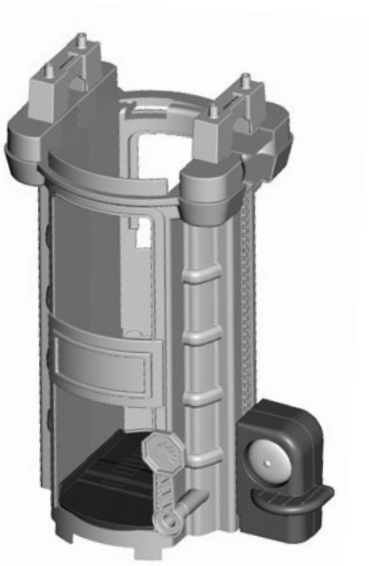


Elevator



2 Columns

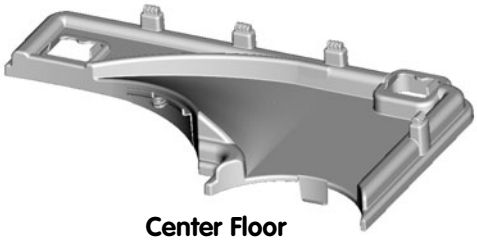

Center Floor

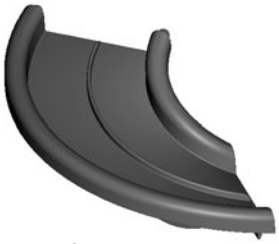

4 Ramps



Handle



Post



Floor Support




Pump

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2010 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA


L1343b-0920

Assembly

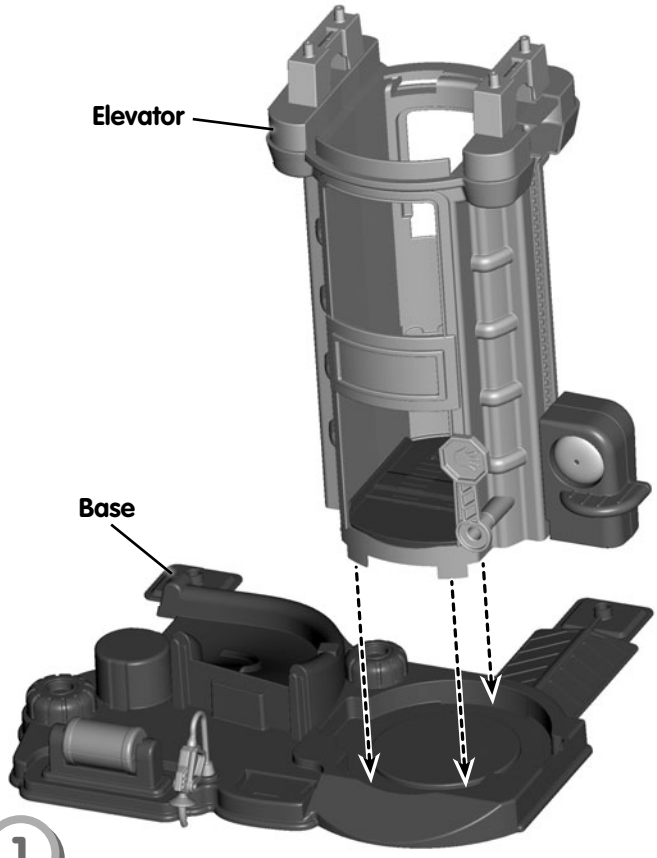

1

- Insert the tabs on the bottom of the elevator into the slots in the base.
- Push to **"snap"** in place.

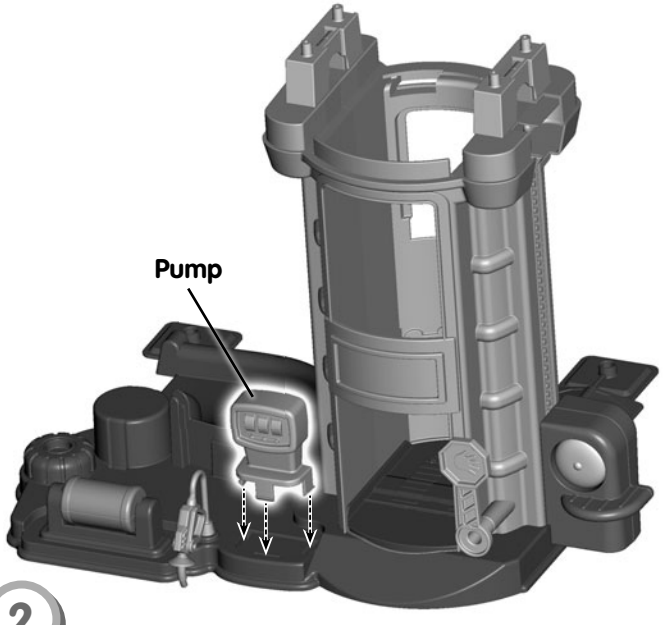


2

- Insert the tabs on the pump into the slots in the base.
- Push to **"snap"** in place



3


- **"Snap"** the tabs on the post onto the base.

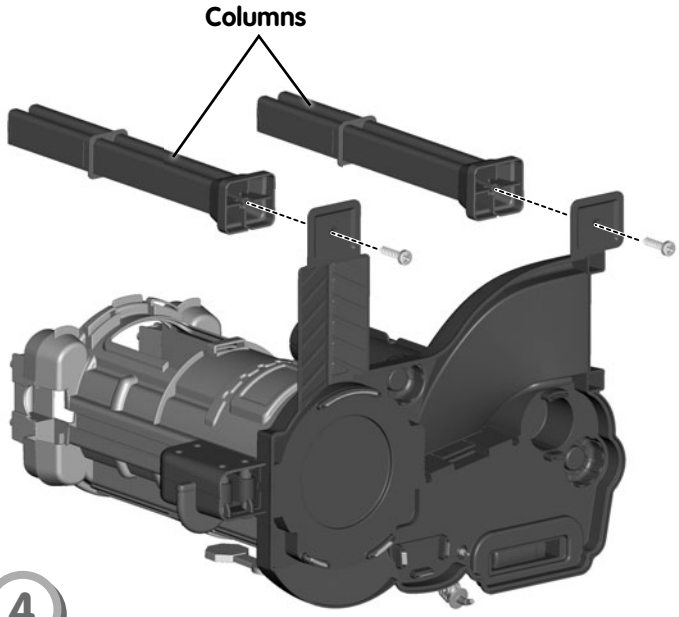


4

- Set the assembly on its side, and locate the tabs on the base.
- Fit a column onto one of the tabs. While holding the column in place, insert a screw into the hole in the tab and tighten.
- Repeat this procedure to attach the other column.
- Set the assembly upright.


Assembly

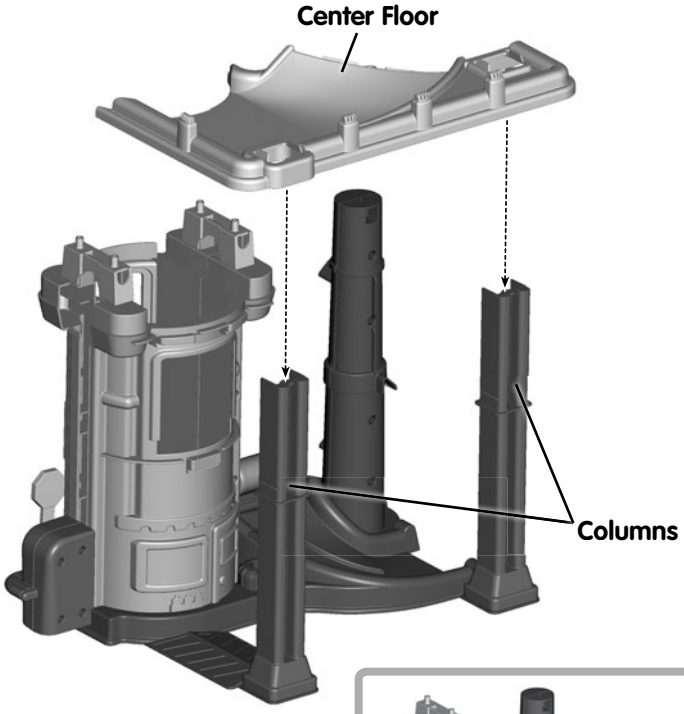

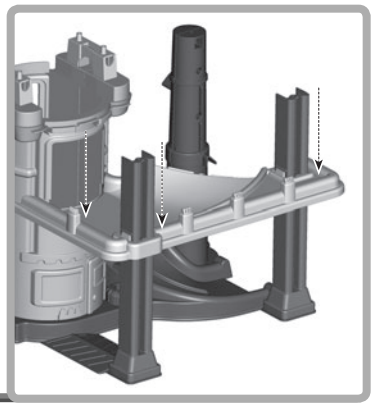


5

- Fit the center floor onto the two columns, as shown.
- Press down on the center floor near the elevator and each column to **"snap"** in place.

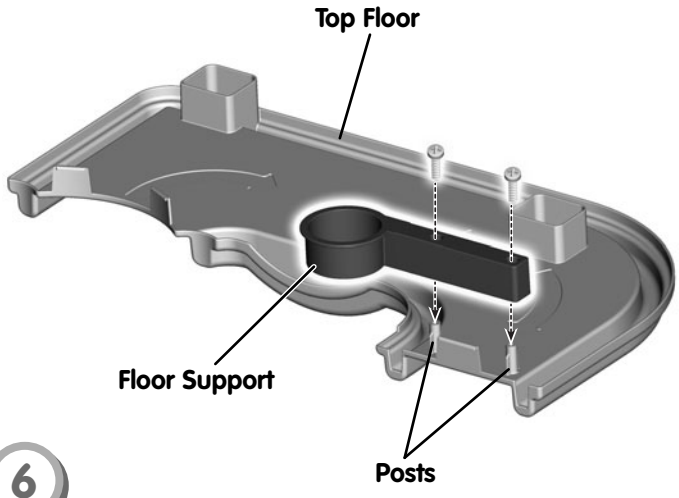


6

- Fit the floor support onto the posts on the underside of the top floor.
- Insert two screws into the floor support and tighten.

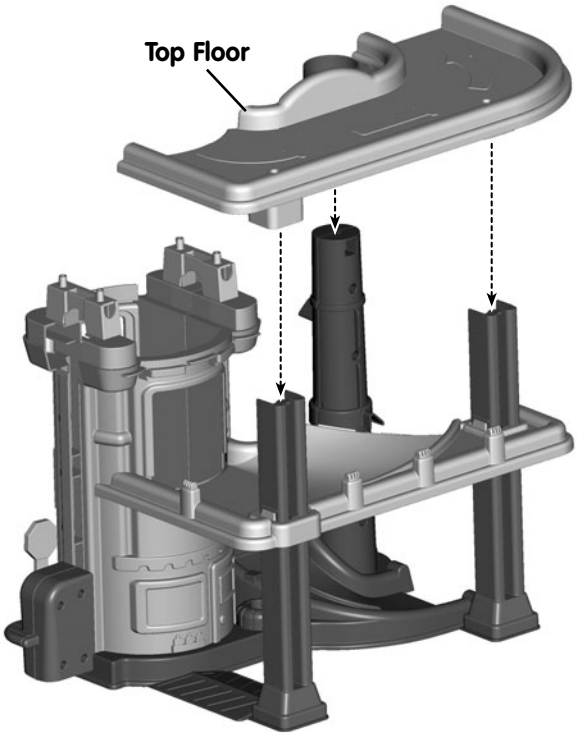

7


- Fit the top floor onto the post and columns.
- Press down on the top floor near the post to **"snap"** in place.

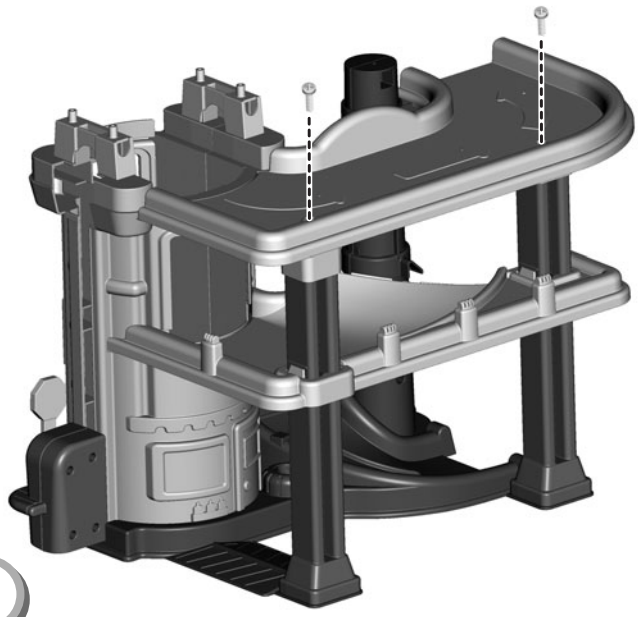

8


- Insert two screws into the top floor and tighten.

Assembly

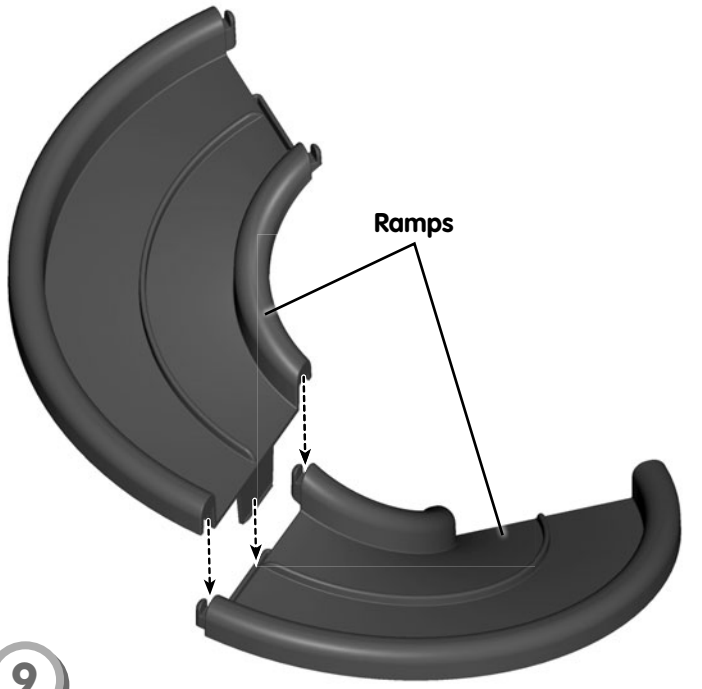


9

- Insert the the tabs on one ramp into the slots in another ramp.
- Repeat this procedure with the remaining ramps to create another ramp assembly.

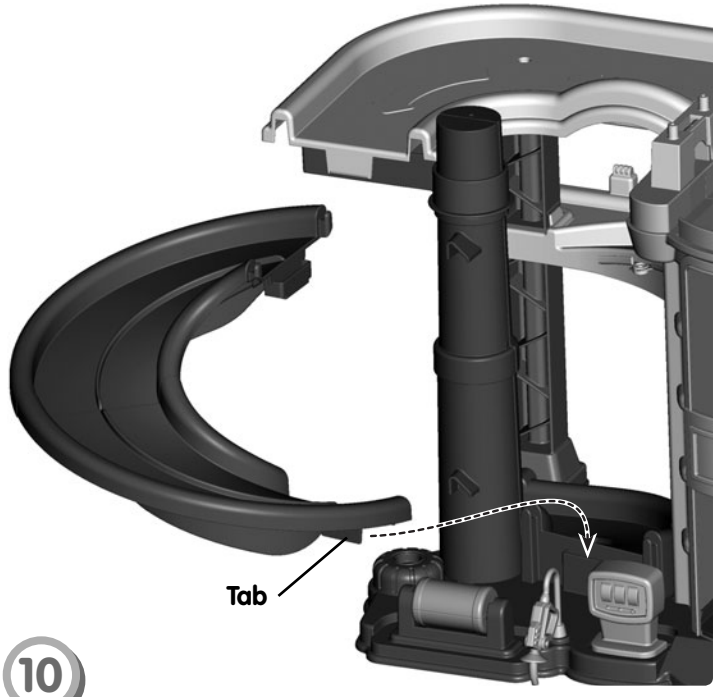


10

- Insert and **"snap"** the tab on one of the ramp assemblies into the slots in the base.

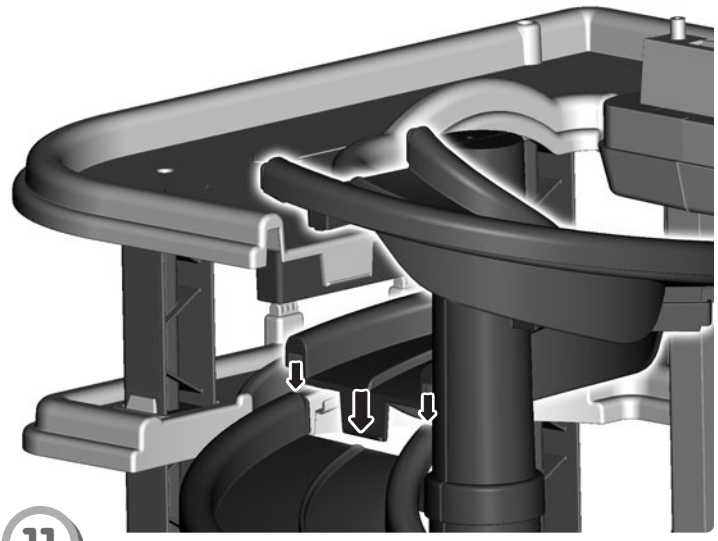

11


- Slide the other ramp assembly around the post.
- Insert and **"snap"** the tabs on the bottom of the upper ramp assembly into the slots in the top of the lower ramp assembly.

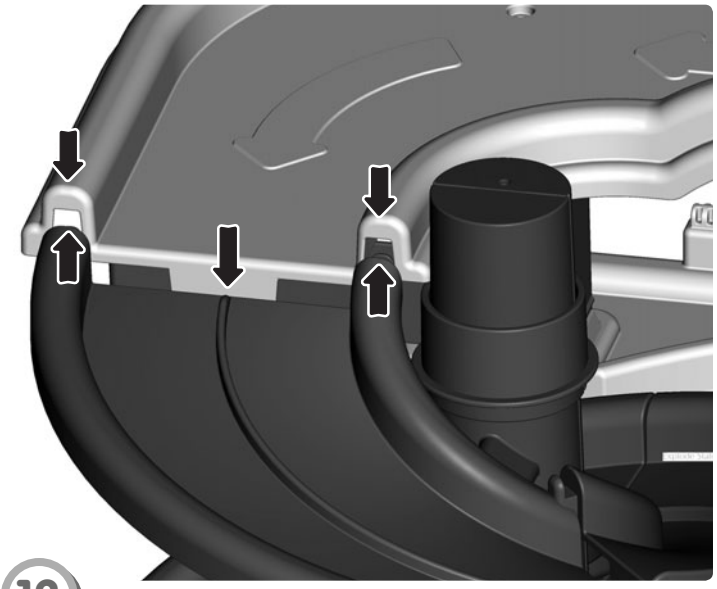

12


- Insert and **"snap"** the tab on the top floor into the slot in the upper ramp assembly.

Assembly

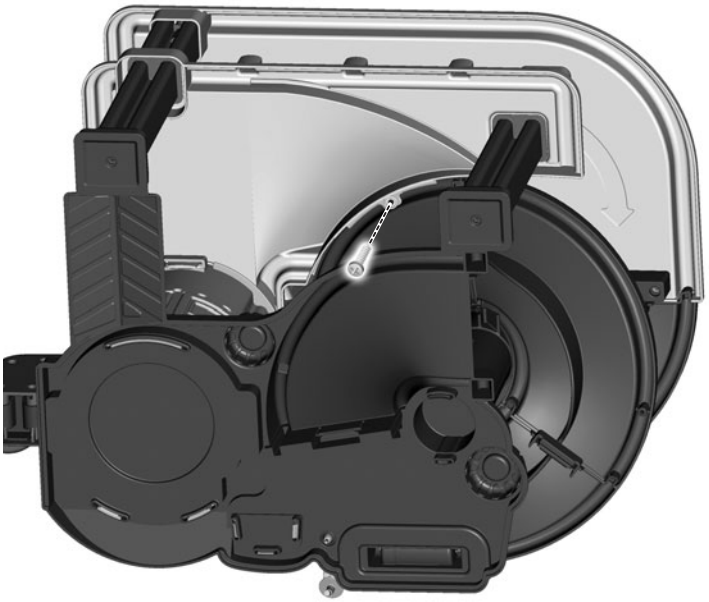

13 BOTTOM VIEW


- Turn the assembly over.
- Insert a screw through the hole in the center floor and into the ramp assembly. Tighten the screw.

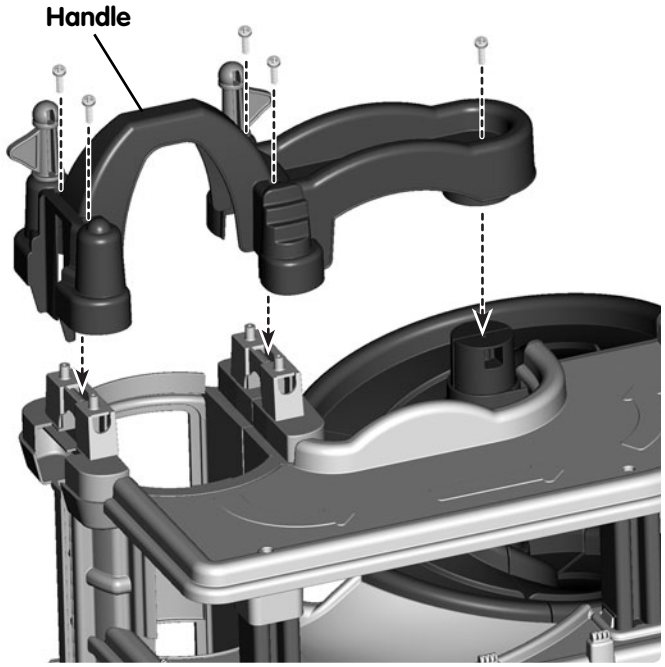

14

- Turn the assembly upright.
- Fit the handle onto the elevator and post.
- Insert five screws into the handle and tighten.

Battery Replacement

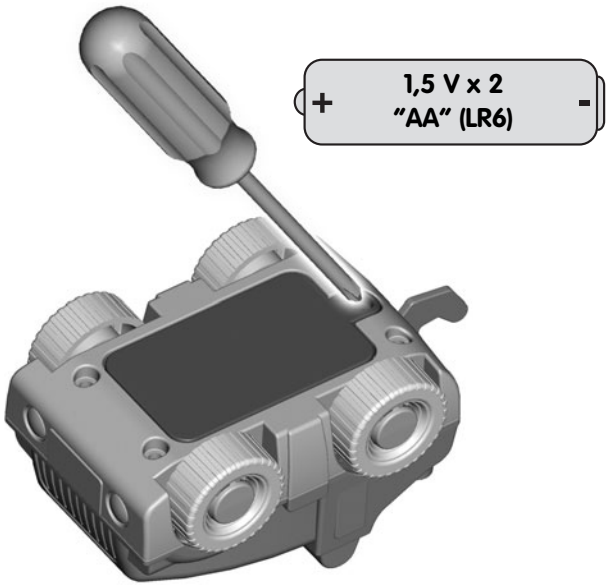

For best performance, we recommend replacing the batteries that came with the tow truck, with two, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the bottom of the tow truck.
- Loosen the screw in the battery compartment door. Remove the battery compartment door.
- Insert two "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: *We recommend using* ***alkaline*** *batteries for longer battery life.*

- Replace the battery compartment door and tighten the screw.
- If the tow truck begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.
- When sounds become faint or stop, it's time for an adult to change the batteries!


- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Three Stories of Fun!

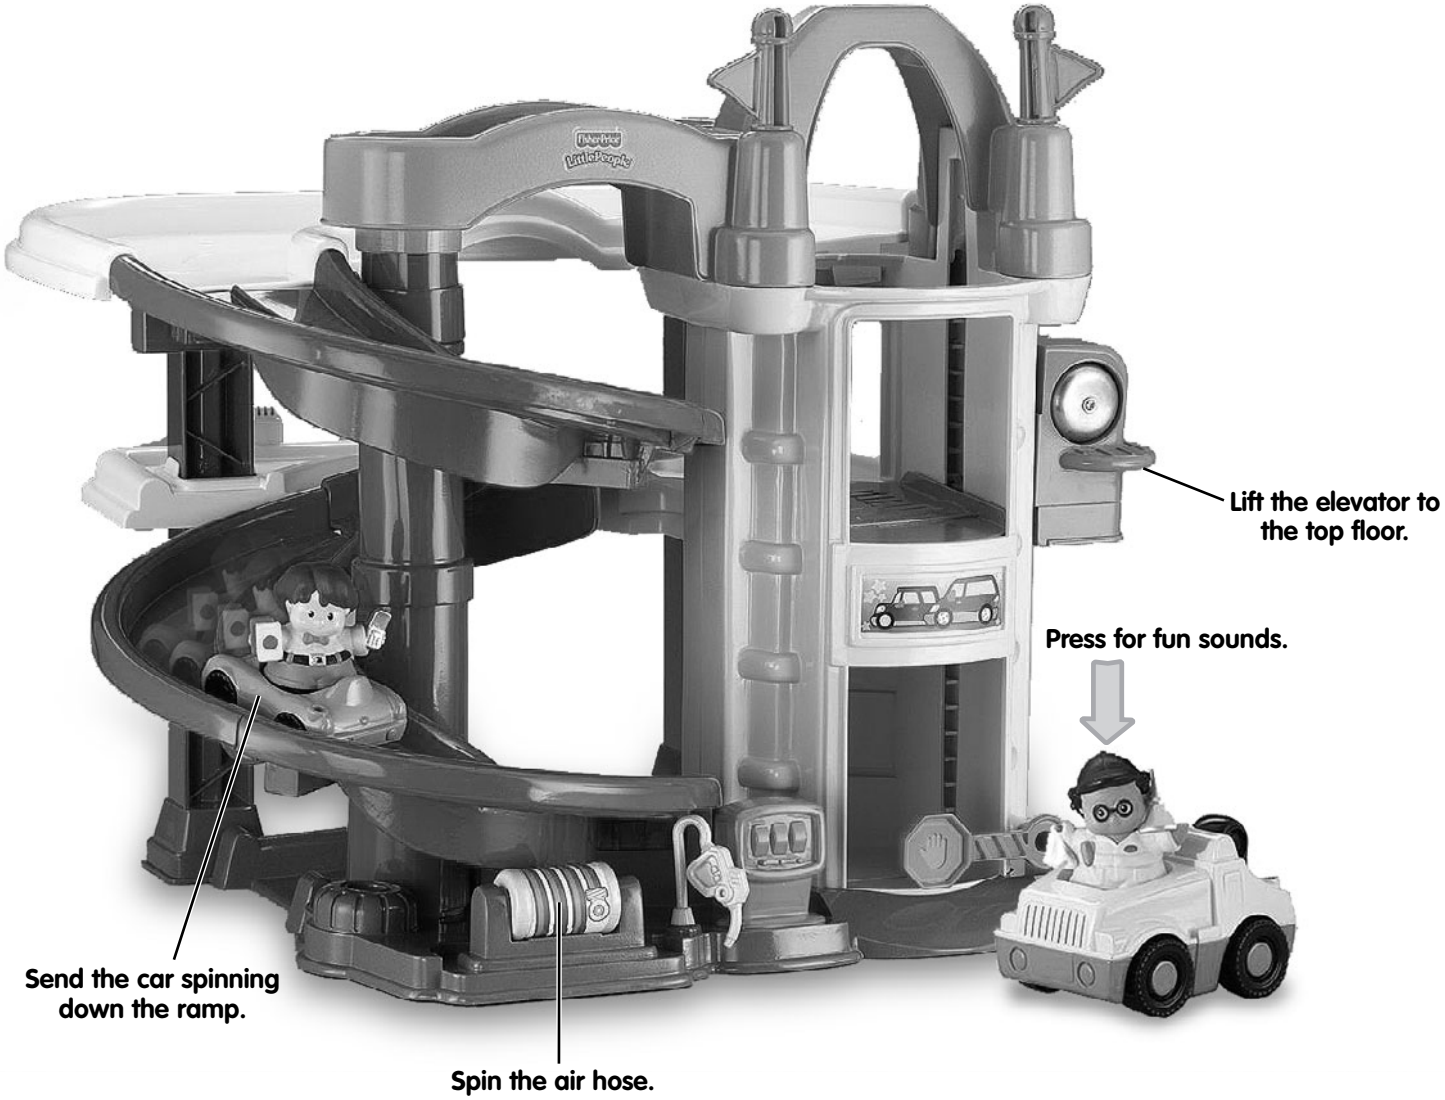

Consumer Information

CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution. Do not immerse the toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.